


Installation Instructions




Step 1 ▪
Place supplied rubber isolators on motor mounts.




Step 2 ▪
Place drill plates on both sides of motor.

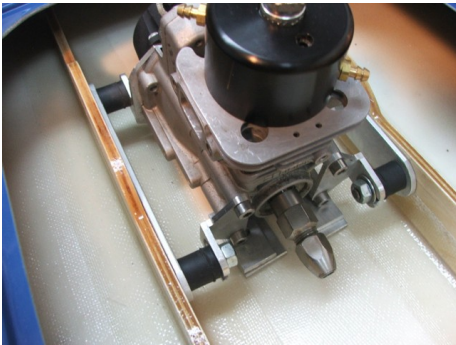

Step 3 ▪
Place motor between rails and shim to your desired position.

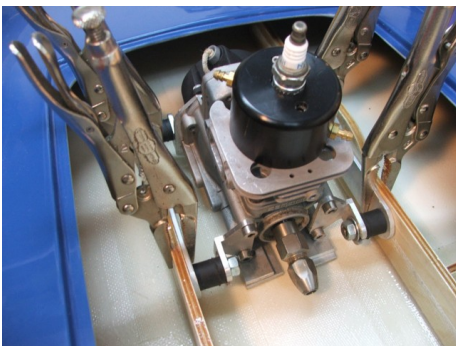

Step 4 ▪
Firmly clamp drill plates to rails as shown.
Note: 6" Needle Nose Vise Grips work best.

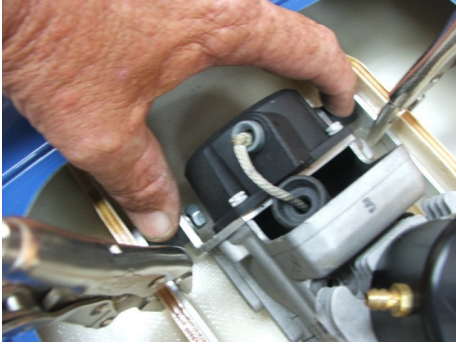


Step 5 ▪

Loosen all 4 nuts on mounts. Hold down on front isolators while lifting front of motor.



Step 6 ▪


Drill holes as shown.

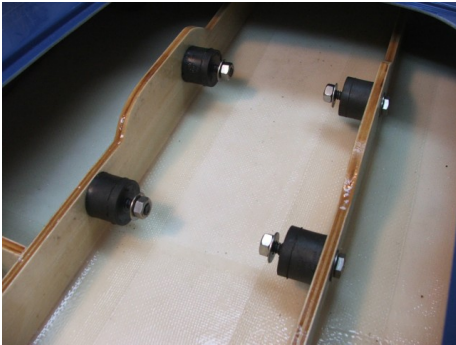

Step 7 ▪

Install rubber isolators.

Note: Don't forget to seal the holes in the wood with thin CA

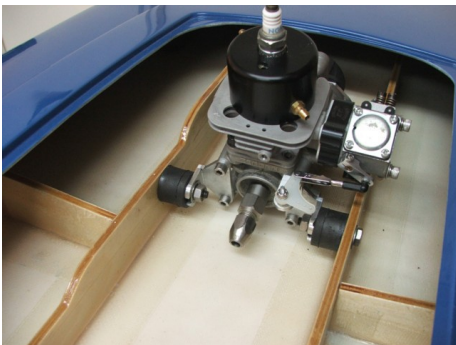

Step 8 ▪

Install your motor.